



Quick deployment unit for radiation monitoring

- Maximum protection of the first responders
- Operational after few minutes installation
- Emergency proof communication and built-in GPS
- Rechargeable battery, up to 4 years autonomy





GAMMATRACER SPIDER

Emergency probe for gamma monitoring

GammaTRACER Spider is an innovative gamma monitoring solution for emergency applications.

Based on GammaTRACER's **field proven technology**, already in operation in more than 100 countries, it provides **reliable measurements**.


The GammaTRACER Spider can be installed anywhere in only a few seconds thanks its self-deployable system and feet design, **reducing the first responders' exposure** in

emergency situation.

The probe includes a **satellite modem** providing reliable measurements without any telecommunication networks. Its **intuitive software** is available with the WebVIEW interface to be used on laptop, smartphone or tablet.



Quick deployment probe

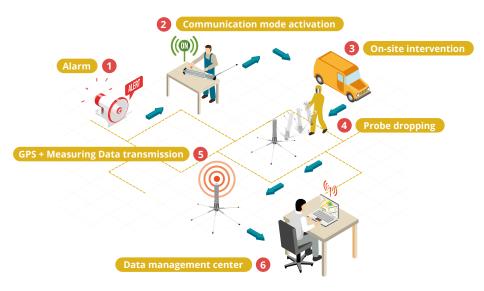

Environmental monitoring range

Discover other products of Bertin Instruments



Beta and Gamma air monitoring

Monitoring system dedicated to crisis management



From one probe to turnkey solutions: your data is secured and saved in a SQL central server, as well as easily integrated in your local IT system.

Technical features

DETECTION PRINCIPLE 2 GM Tubes, energy compensated H*(10)

DIMENSIONS 110 mm x 650 mm

WEIGHT Manual stand-up : 2,2 kg Self stand-up : 3,6 kg

ENERGY RANGE From 45 keV to 2 MeV

MEASUREMENT RANGE From 20 nSv/h to 10 Sv/h

MEASUREMENT CYCLE From 1 min to 2 hours

BUILT-IN SENSORS GPS, temperature, movement

DATA TRANSMISSION Satellite, Radio (ShortLINK/SkyLINK)

AUTONOMY Up to 4 years without data transmission

Bertin Technologies S.A.S • Parc d'Activités du Pas du Lac • 10 bis, avenue Ampère, 78180 Montigny Le Bretonneux, France WWW.BERTIN-INSTRUMENTS.COM RCS: 422 511 204 VERSAILLES | SIREN: 422 511 204